

Enabling emergency mode

1. Turn the rotary selector clockwise until the display shows "**EMERGENCY MODE**". This is also indicated by a **symbol**.



2. Troubleshooting by STIEBEL ELTRON Group customer service. You will need to have your appliance details to hand.



3. After troubleshooting, return the appliance to automatic mode.
-