



## Enabling emergency mode


1. To unlock, press **Menu** for three seconds.

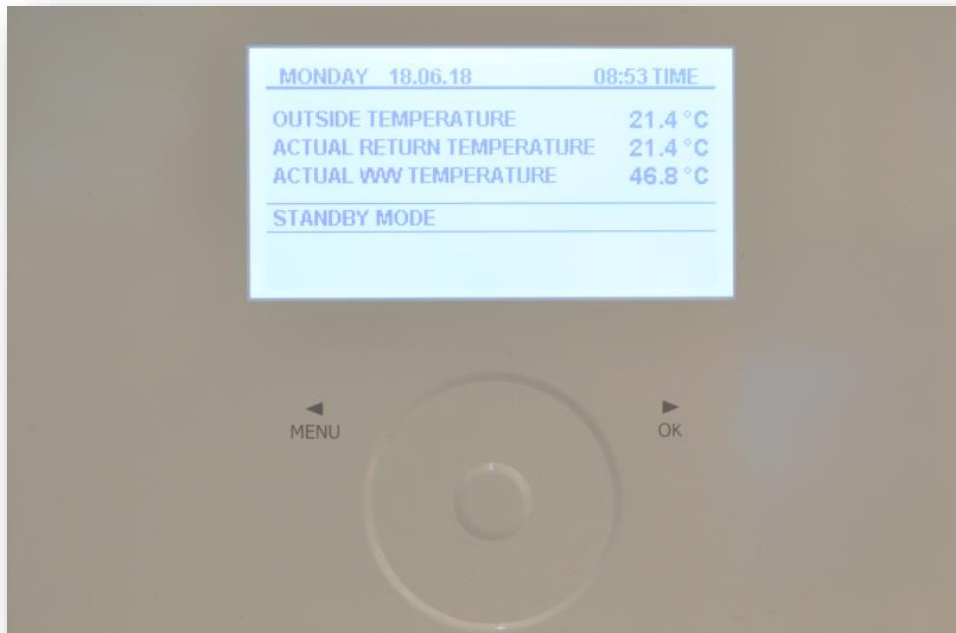

2. Move your finger clockwise around the scroll wheel until the bar is on **Emergency mode**.  
Then press **OK**.

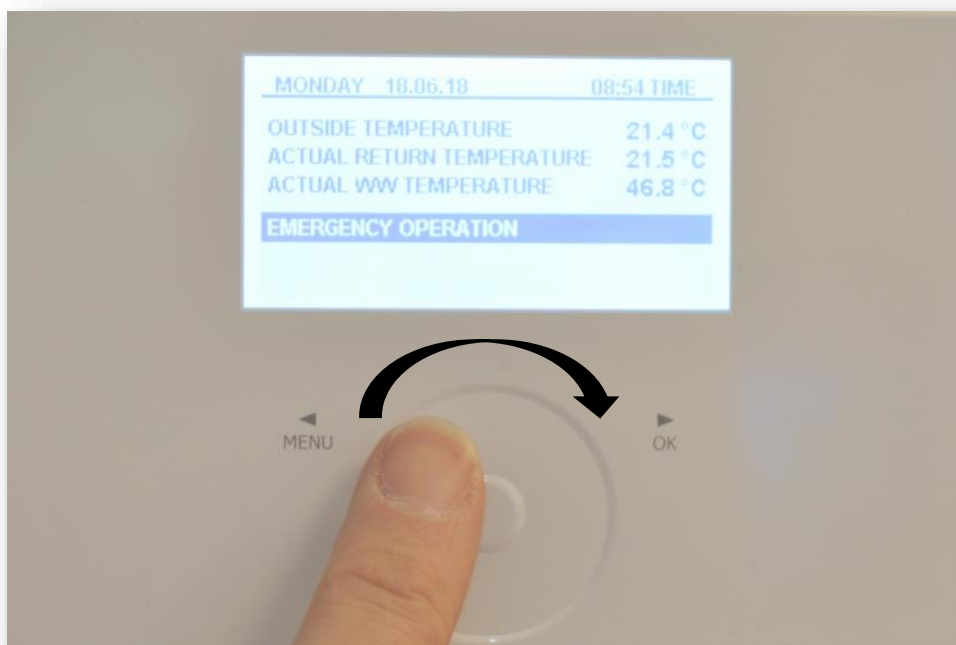

3. Emergency mode is also indicated by a **symbol** on the display.

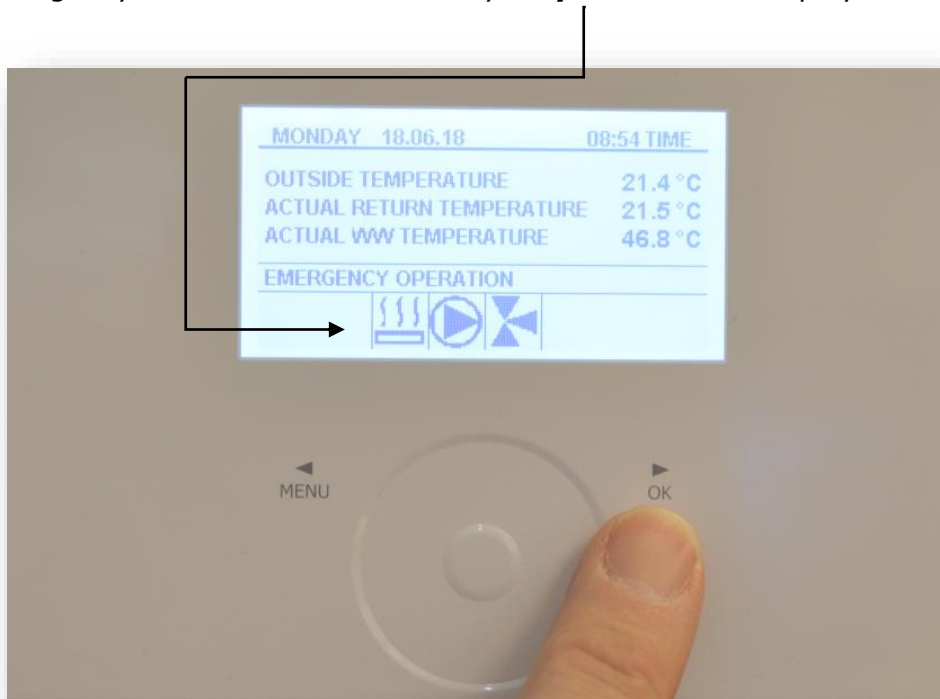

4. Troubleshooting by STIEBEL ELTRON Group customer service.  
You will need to have your appliance details to hand.  
After troubleshooting, return the appliance to automatic mode.