


## Performing a reset

1. Open the flap on the controller. Turn the rotary selector anti-clockwise until the display shows **COMMISSIONING**.

Second control level – flap open.

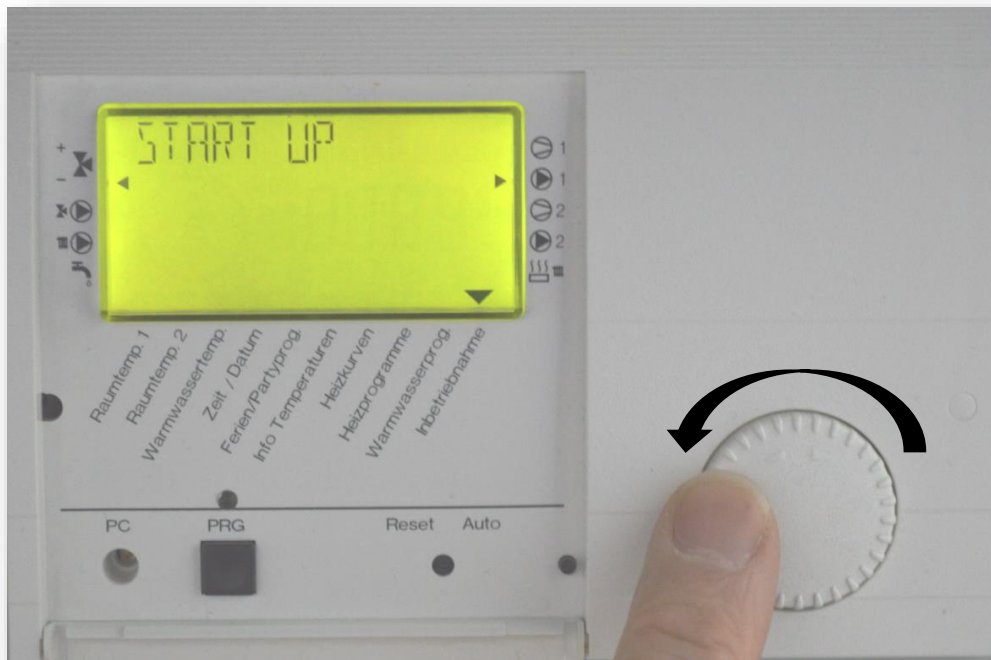

2. Then press the PRG button twice. The red light should come on.




- The display now shows **0000**, with the first 0 flashing. Turn the rotary selector clockwise until this first digit is replaced by a flashing 1 (**code 1000**). Then press the PRG button four times.




- The display switches to **CODE-OK**.



5. Turn the rotary selector anti-clockwise until the text **RESET HP OFF** appears.

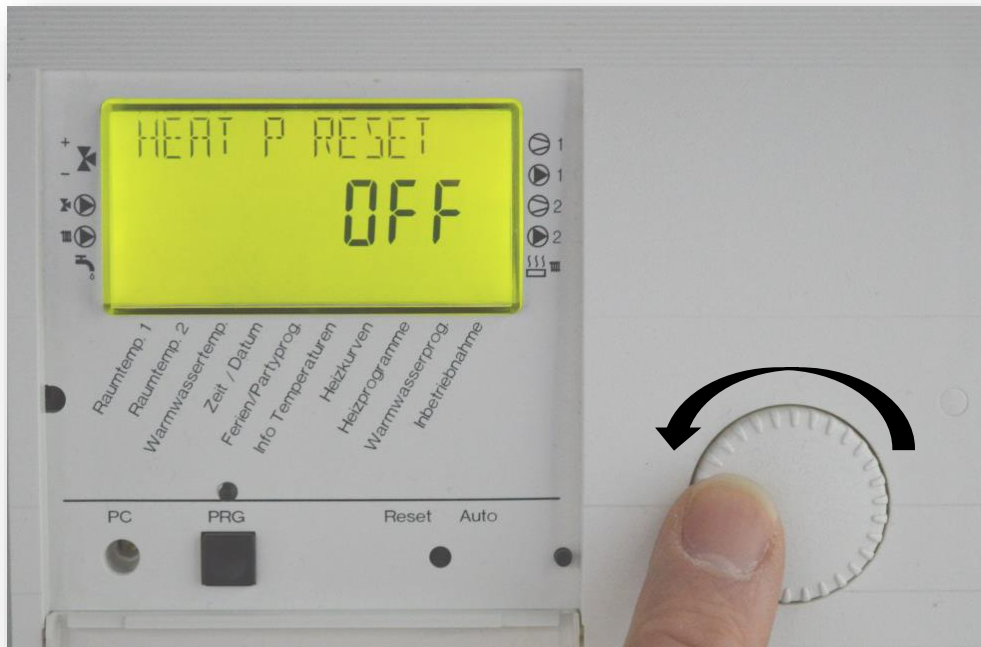


6. Then press the PRG button once until the red light comes on again.

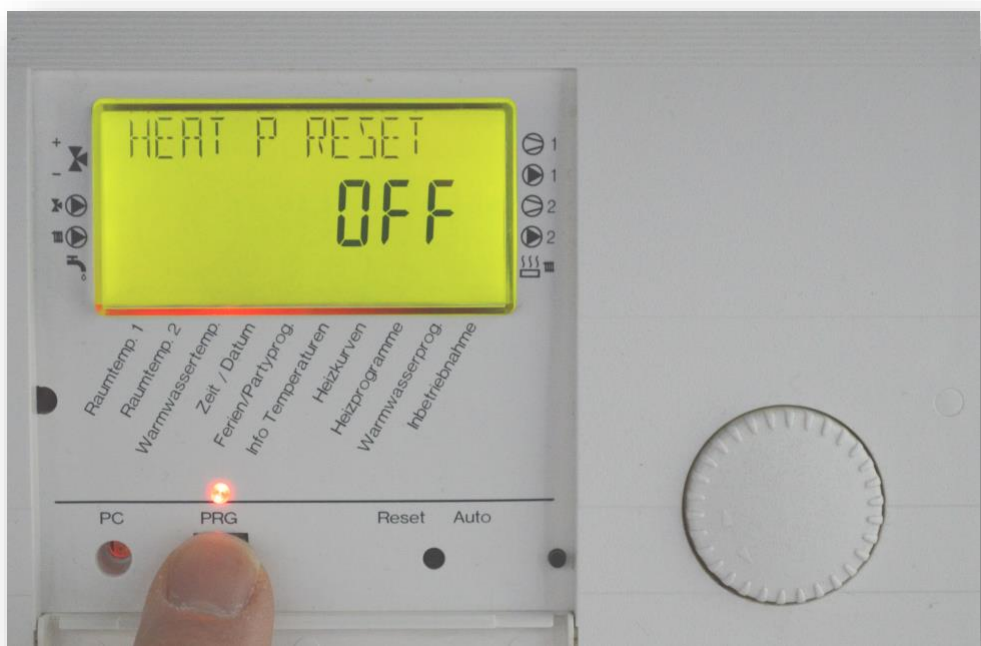

7. Turn the rotary selector clockwise until **"On"** is displayed.



8. Now press the PRG button again to turn the red light off. **RESET HP OFF** is displayed again.

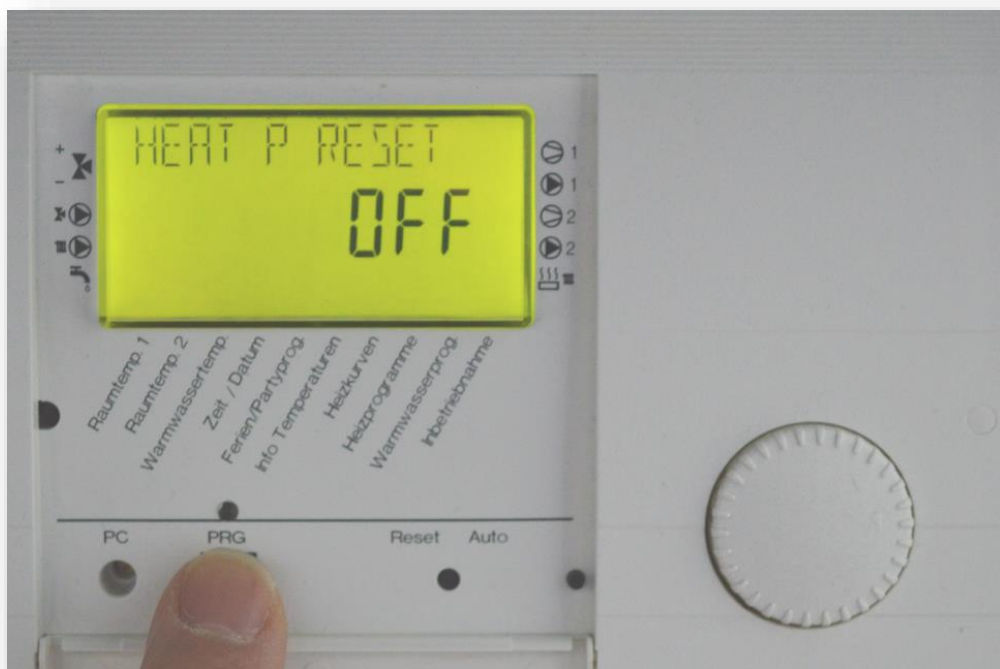

9. Now close the controller flap again. The reset is complete



Note the display indication and select your required parameters using the rotary selector at the corresponding point (Standby/Automatic/Day or setback mode/DHW heating/Emergency mode).